



## A

- Account Information 4
- Address
  - Changing 72
  - Checking 72
- Adjusting the Remote Antenna 73
- Adult Content, Hiding 48
- All Episodes 62
- Antenna
  - Adjusting, Remote Control 73
  - Attenuator, Remote Control 74
  - Dish 107
  - Over-the-Air 110
  - Remote Control 17
- Automatic Timer 66

## B

- Back Button 55
- Back Panel 21
- Batteries, Remote Control 17
- Browse Banner 30, 125
- Buying a Pay-Per-View 36

## C

- Caller ID 90
  - History 91
  - Screens 90
  - Setting Up 90
  - Troubleshooting 129
- Canceling a Procedure 23
- Changing Channels 28, 123
- Changing Languages 91, 129
- Changing the Guide Display 94
- Changing the Program Guide Order 94
- Channel Locks 47
- Check Switch 117
- Checking the Device Codes 78
- Checking the Remote Control Address 72
- Closed Captioning 92
- Closing Menus 22
- Combination Devices 75

- Connecting a VCR to the Remote TV 109
- Connecting Over-the-Air Antenna/Cable TV 110
- Connecting to the Nearby TV (TV1) 100
- Connecting to the Phone Line 108
- Connecting to the Remote TVs (TV1/TV2) 103
- Connecting to Your Dish Antenna 107
- Connections, Back Panel 21
- Controlling Other Components 75
- Controls and Indicators, Front Panel 21
- Customer Service 52

## D

- Daily Schedule 63, 65
- Deleting a Timer 69
- Descriptive Video 91
- Device Codes 76, 78, 132
  - DVD Player 134
  - DVD VCR Combo 134
  - Tuner/Amplifier 133
  - TV 132
  - TV/DVD Combo 134
  - TV/VCR Combo 134
  - VCR 133
- Device Codes Scan 77
- Diagnostics 116
- Discrete Power On and Off 84
- Dish Antenna 107
- DISH Network Account 4
- DISH Network Logo, Moving 8
- DISH On Demand 7, 36
- DishHOME 52
- DishHOME Interactive TV 7
- DishPASS 62, 68
- Dolby Surround Sound 93
- Dual Mode 12
  - Recording Events without Record Plus 59
  - Recording with Record Plus 58
  - Using Record Plus 56
- DVD Player Codes 134
- DVD/VCR Combo Codes 134

## F

Factory Defaults 95  
Fast Forwarding 55  
Favorites Lists 40, 127  
Finding a Program to Watch 5  
Frame-By-Frame 55  
Front Panel 21, 49  
FWD Button 55

## H

Hiding Adult Content 48  
Highlighting Options in a Menu 22

## I

Improving Receiver Control 72  
    Adjusting the Remote Antenna 73  
    Changing the Address for Remote Control 2  
    (Blue) 72  
    Checking the Remote Control Address 72  
    Confirming Remote Control Address 73  
    Installing a UHF Attenuator 74  
Inactivity Standby 96  
Installing a UHF Attenuator 74

## K

Keyboard, Virtual 24

## L

Limited Mode 75  
List of Choices in Menus 22  
Local Satellite Channels 113  
Locking Pay-Per-View Channels 47  
Locking the Front Panel 49  
Locks 44  
    Channel Locks 47  
    Creating or Changing a Password 45  
    Hiding Adult Content 48  
    Locking and Unlocking Your Receiver 45  
    Locking or Unlocking Pay-Per-View Channels  
    47  
    Locking or Unlocking the Front Panel 49  
    Ratings Locks 46  
    Troubleshooting 130  
Low Battery Warning 17

## M

Manual Timer 67

## Menus 22

    Canceling a Procedure 23  
    Highlighting Options 22  
    List of Choices 22  
    Open and Close 22  
    Selecting Options 22  
    Troubleshooting 131  
    Using 22

Message Numbers 121

Mode Light 12, 13

## Modes

    Dual 12  
    Single 12, 13  
    Switching 15

Modulator Setup 88

## N

Naming Favorites Lists 41

Nearby TV 3, 12, 12, 16  
    Connecting 100  
    No Picture 101  
    Setting Up to Display in HD 102  
    YPbPr Connections 101

New Episodes 62

No Picture on the Nearby TV 101

## O

Off-Air Channels 47  
Opening Menus 22  
Ordering Your Program Packages 4  
Over-the-Air Antenna 110  
    Peaking 113  
    Scanning for Channels 112  
    Transmit Channel Numbers 114  
Over-the-Air Channels 40  
Over-the-Air TV Broadcasts 114

## P

Password 45  
Pause Button 55  
Pausing a Program 54  
Pausing Live TV 6  
Pay-Per-View 7, 36  
    Buying 36  
    Locks 47  
    Reviewing Purchases 36  
    Troubleshooting 131

- Peaking Your Over-the-Air Antenna 113
  - Phone Line 108, 130
  - Phone Line Connection 108
  - Phone System Setup 108
  - Picture-In-Picture 33
  - Playing a Recorded Program 56
  - PocketDISH 7, 90
  - Point Dish 117
  - Program Guide 28
    - Channel Order 94
    - Display 94
    - Troubleshooting 125
  - Programming the Recover Button for Remote Control 2 (Blue) 82
  - Programming to Control a Second Satellite Receiver 81
  - Purchasing a Pay-Per-View 36
- R**
- Rain and Snow Fade 7
  - Ratings Locks 46
  - Reasons Why Timers are Skipped 64
  - Receiver Back Panel 21
  - Receiver Front Panel 21
  - Receiver Updates 96
  - Record Link 57, 62
  - Record Plus 56, 59
  - Recording 15, 56
  - Recording a Live Program 56
  - Recording Events without Record Plus 59
  - Recording in Single Mode 57
  - Recording Options 60
  - Recording While Watching Different Programs 57
  - Recordings 62
  - Recover Button 82
    - Programming 82
    - Using 82
  - Remote Antenna 17
  - Remote Battery Low 17
  - Remote Control 15
    - Antenna 17, 73
    - Batteries 17
    - Buttons, Receiver Control 18
    - Buttons, TV Control 19
    - Buttons, VCR Control 20
    - Changing the Address 72
    - Checking the Address 72
    - Checking the Device Codes 78
    - Combination Devices 75
    - Confirming Operation 73
    - Controlling Other Components 75
    - Limited Mode 75
    - Low Battery Warning 17
    - Modes 75
    - Programming the Recover Button for Remote Control 2 (Blue) 82
    - Programming to Control a Second Satellite Receiver 81
    - Removing the Recover Button Channel Programming 83
    - Setting Up Using Device Codes Scan 77
    - Switching Between TV and Device Volume Control 79
    - Troubleshooting 124
    - Types 16
    - UHF Attenuator 74
    - UHF Pro 16
    - Using the Recover Button 82
  - Remote Control 1 (Green) 3, 12
  - Remote Control 2 (Blue) 3, 12
    - Recover Button 82
    - Removing the Recover Button Channel Programming 83
    - Using the Recover Button 82
  - Remote TV 3, 12, 12, 13, 16
  - Remote TVs (TV2) 103
    - Connecting a VCR 109
  - Removing the Recover Button Channel Programming 83
  - Replacement Remote Control Replacement Remote Control (TV1 UHF Pro) 25, 100, 103
  - Resetting to Factory Defaults 95
  - Resetting Your Receiver 116
  - Reversing, Fast Forwarding, and Skipping 55
  - Reviewing Pay-Per-View Purchases 36
- S**
- Satellite TV Reception 7
  - Scanning for Over-the-Air Antennas 112
  - Scheduling Receiver Updates 96
  - Second Satellite Receiver 81
  - Selecting Menu Options 22
  - Setting Up a DishPASS Timer 68
  - Setting Up a Manual Timer 67

- Setting Up an Automatic Timer 66
- Setting Up Caller ID 90
- Setting Up to Display in HD 102
- Setting Up Using Device Code Tables 76
- Setting Up Using Device Codes Scan 77
- Shared View 88
- Single and Dual Modes
  - Favorites Lists 15
  - Recording 15
  - Switching 15
- Single Mode 12, 13
  - Picture-In-Picture 33
  - Recording 57
  - Shared View 88
- Skip Back Button 55
- Skip FWD Button 55
- Skipped Timers 64
- Skipping 55
- Slow Motion and Frame-By-Frame 55
- Solar Interference 8
- Special Considerations When Using Timers 65
- Standby, Inactivity 96
- Switching Between TV and Device
  - Volume Control 79

**T**

- Themes 32
- Timers and Recordings 62, 64
  - Daily Schedule 63
  - Deleting a Timer 69
  - Reasons Why Timers are Skipped 64
  - Setting Up a DishPASS Timer 68
  - Setting Up an Automatic Timer 66
  - Special Considerations When Using Timers 65
  - Timer Frequency 62
  - Timer Options 63
  - Timer Priorities 62
  - Timer Types 62
  - Timers List 63, 65
  - Troubleshooting 128
- Transmit Channel Numbers 114
- Troubleshooting 120
  - Caller ID 129
  - Changing Channels 123
  - Changing Languages 129
  - Favorites Lists 127
  - Hearing a Program 129
  - Locks 130
  - Menus 131
  - Message Numbers 121
  - Pay-Per-View 131
  - Phone Line 130
  - Program Guide and Browse Banner 125
  - Remote Control 124
  - Timers 128
  - Watching a Program 126
- Troubleshooting Tools 116
  - Diagnostics 116
  - Point Dish and Check Switch 117
  - Resetting Your Receiver 116
- Tuner/Amplifier Codes 133
- TV Codes 132
- TV/DVD Combo Codes 134
- TV/VCR Combo Codes 134

**U**

- UHF Attenuator 74
- Unlocking Pay-Per-View Channels 47
- Unlocking the Front Panel 49
- Unlocking Your Receiver 45
- Updates 96

**V**

- VCR Codes 133
- VCR Connection 109
- Virtual Keyboard 24
- Volume Adjustment, AUX and TV 79

**W**

- Watch TV 5
- When the Receiver is Off 64

**Y**

- YPbPr Connections 101

Notes



Notes

Notes

Notes



Notes

Notes